 


Devola

INSTRUCTION MANUAL

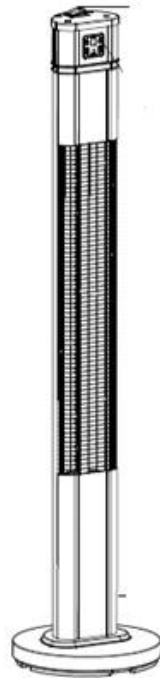

Models:
DVPH16PFSB
DVPH16PFSSL
DVPH20PFSB
DVPH20PFSSL

Fig.A

 
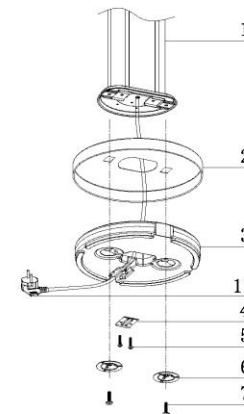 


Fig.B

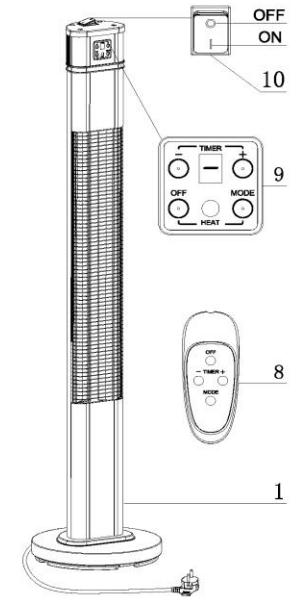

Parts Descriptions:

No.	Part Name	No.	Part Name
1	Main Body	5	Screw M4*28
2	Base Cover	6	Washer
3	Base	7	Screw M6*35
4	Cord Clip	8	Remote controller

Accessories Pack Check List:			
Accessory Name	Qty	Accessory Name	Qty
Allen Key	1	Cord Clip	1
Screw M4*28	2	Washer	2
Screw M6*35	2	Remote Controller	1

Disposal of appliances and batteries



After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies:

Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale.

Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilising old devices, you are making an important contribution to protecting our environment.

Cautions:

- Children of less than 3 years should be kept away unless continuously supervised.
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
CAUTION -- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance if it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate,

and clean the appliance or perform user maintenance.

- The heater must not be located immediately below a socket-outlet.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not place the unit close to curtain and/or other flammable objects otherwise there will be a danger of catching fire.
- Do not cover the unit with anything during operation or a short time after it has shut down.
- Do not wrap the power supply cord on the unit.
- Do not use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
- Do not use this unit as a cloth drier or towel drier.
- Do not use this unit as a sauna heater.
- Do not use this unit as a room heater of heat storing.
- Do not use this unit in place of animal propagating and raising.
- Do not use this unit in heating system of hot air center.
- Do not immerse this unit into water for cleaning.
- The unit must be placed with the clearance of 150cm at least to the wall.**
- The unit must be securely placed on a horizontal and flat surface.**
- The unit is at high temperature during operation. It keeps hot for a period of time after shutting down. Potential danger would occur when touching it during this period.
- The unit must be handled with care and avoid of vibration or hitting.
- The unit must be securely grounded during operation.
- When damaged, the unit must be repaired by professional repairing team.
- If the supply cord is damaged, it must be replaced by a qualified engineer.
- When assembling, keep clear from any board or flammable material.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The unit is for outdoor use only. It's not allowed to use in building site, greenhouses, barn or stable where there's flammable dust.
- The head of the unit is at high temperature during operation. Unplug the unit and wait till it's cool before cleaning.
- The unit should be plugged in a socket, which is easily visible and reachable.

WARNING:

This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Preparation

- Prepare a cross head screwdriver.
- Read this instruction manual carefully before installation and use. Keep this instruction manual and warranty card in a proper and safe place for future use in case needed.

Installation:

1. Put the main body up-side-down. Put the plug and power supply cord through the holes on the center of Base Cover (#2) and Base (#3). Then slide Base Cover (#2) , Base (#3) and Washer (#6) onto Main body respectively.
2. Fix Washer (#6), Base (#3), Base Cover (#2) with Screw M6*35 (#7). Clip the power supply cord with Cord Clip (#4) and fix it onto Base (#3) with Screw (#5).

Operations:

3. Plug in the unit to a socket, making sure the power supply is the same as rated.
4. Press the Main Switch on the top of the control box.
5. When the mark "-" in the digital display starts flashing, it's showing the that heater is on standby.
6. Press the MODE button on the control panel or remote control to switch the heater on or to a higher power.
7. The power setting level 1, level 2, level 3 will show on the digital display.
8. Press TIMER "+/-" button on control panel or remote control to choose the timer between 0-9 hours. "0" means the timer is off. The digits of the power settings and timer will be displayed as cycled: power settings for ten seconds, timer flashing for five seconds.
9. To shift the heater to standby mode, press OFF button on control panel or remote control. The mark "-" in the digital display will start flashing again (See Step 3).
10. To switch off the heater, press the Main Switch on left side of the heater accordingly.

Cleaning:

Unplug the unit before cleaning. It should be wiped with wet cloth. Do not use too much water.

Warranty

Guarantee and Service Policy

This product is covered by a standard parts or replacement warranty for a period of 12 months from the date of purchase.

Extend your warranty for 12 months for free by visiting www.devola.co.uk/warranty.

Incorrect installation and failure to follow correct operating instructions are excluded. Consequential costs such as labour charges or damage to surroundings are expressly excluded.

Contact Us

If you experience a problem with this product you should first contact us on 0121 250 2180 before taking any further action.

CLAIM YOUR EXCLUSIVE 5% OFF YOUR NEXT ONLINE ORDER

DISCOUNT CODE: DEV5

OFFER VALID FOR 21 DAYS. DON'T MISS OUT!

Visit our websites:

www.devola.co.uk